



## Message From The Founders

First off we want to say thank you, and that we appreciate the faith you have in our brand to buy our product.

We started Tech Armor with the idea that we would bring high quality products to our customers at a price everyone can afford. We start with the best components available and combine that with support from the best team in the business, our valued Tech Armor Nation, and back it all with the industry best Tech Armor Lifetime Product Replacement Warranty.

If you are anything less than happy with our products, we want to know about it! Your feedback, good or bad, makes us a better brand and lets us serve you better, so please don't keep quiet. Email us at [customersupport@techarmor.com](mailto:customersupport@techarmor.com). We will make sure you are 100% satisfied with your Tech Armor purchase or we will refund you.

**Thank you for your business.**

Joe and Eric  
*Co-Founders*

## INSTALLATION GUIDE

Check out our easy instructions and watch a short video to get the best installation for your new car mount.

[techarmor.com/car-mounts](http://techarmor.com/car-mounts)




# TECH ARMOR®

## Universal Magnetic Car Mount

## 3M Adhesive

### Package Includes:

Please verify you have the following parts:

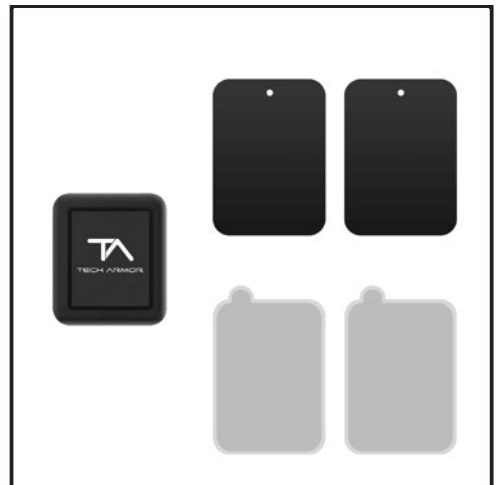

## Step 1: Mounting of Steel Plate

### (Option 1) Mounting to back of Phone:

- a. Place Clear Protective Sticker (yellow removable backing) on to back of phone.
- b. Attach Steel Plate with 3M Adhesive on top of the Clear Protective Sticker being careful not to adhere directly to the phone for easy removal later and to prevent scratching of the back of your phone.

### (Option 2) Mounting to inside of phone case

- a. You're welcome to use the 3M Adhesive plate and simply stick it to the inside of your case.
- b. OR, you have the option of using the other metal plate (without 3M adhesive backing) and simply place it inside of your phone case. Lay your case down flat and place the metal plate inside.
- c. Place Clear Protective Sticker (yellow removable backing) on your phone to prevent scratching of the back of your phone.
- d. Place your phone back in the case, while it is still laying flat on the table to prevent movement.



## Step 2: Mounting the Magnetic Base

(NOTE 3M ADHESIVE IS VERY STRONG AND MAY DAMAGE LEATHER, VINYL OR OTHER MATERIALS UPON REMOVAL. TECH ARMOR IS NOT RESPONSIBLE FOR DAMAGE THAT MAY OCCUR FROM THE 3M ADHESIVE TO YOUR VEHICLE, FURNITURE OR OTHER PLACEMENT LOCATION)

- a. Clean the area where you will affix the Magnetic Base and make sure that the target area is clean, dry and free of dust and debris.
- b. Remove the protective layer from the back of the Magnetic Base to expose the adhesive.
- c. Firmly push the Magnetic Base into place.
- d. Allow the Magnetic Base Adhesive 1 hour to cure and fully bond with the surface before placing your phone.

## Step 3: Mounting Your Phone

Simply place your phone (or case) with the installed Steel Plate against the Magnetic Base and enjoy!

The silicon coating around our magnetic base will keep your phone from sliding around until you're ready to remove it. Whether placing calls, scrolling through music or navigating a map to your next stop, your phone will be right there when you need it.

**Please, ALWAYS use caution while driving and save the texts or emails until you've come to a complete stop!**